

<b>PARAFUSO CRAVO NF 5.8</b>				
<b>L</b>	<b>3/8"</b>	<b>7/16"</b>	<b>1/2"</b>	<b>9/16"</b>
<b>1.1/2"</b>	21,46	33,47	44,01	60,44
<b>1.3/4"</b>	24,38	37,99	49,27	67,99
<b>2"</b>	27,32	39,91	53,72	75,42
<b>2.1/4"</b>	30,24	47,04	59,16	82,97
<b>2.1/2"</b>	33,28	51,57	64,21	90,42

<b>PARAFUSO CRAVO Passo 1,5 5.8</b>		
<b>L</b>	<b>M12</b>	<b>M14</b>
<b>40</b>	44,69	66,20
<b>45</b>	48,83	71,37
<b>50</b>	52,70	77,02
<b>55</b>		81,75
<b>60</b>		86,46

<b>PARAFUSO CRAVO NF 8.8</b>				
<b>L</b>	<b>3/8"</b>	<b>7/16"</b>	<b>1/2"</b>	<b>9/16"</b>
<b>1.1/2"</b>	35,13	48,70	72,01	87,93
<b>1.3/4"</b>	39,93	55,31	80,67	98,94
<b>2"</b>	44,72	61,91	87,93	109,78
<b>2.1/4"</b>	49,54	68,50	96,48	120,77
<b>2.1/2"</b>	54,49	75,08	105,13	131,57

<b>PARAFUSO CRAVO Passo 1,5 8.8</b>		
<b>L</b>	<b>M12</b>	<b>M14</b>
<b>40</b>	65,01	96,30
<b>45</b>	71,06	103,82
<b>50</b>	76,76	112,13
<b>55</b>		118,99
<b>60</b>		125,82